BULLETIN No. 1018 ISSUE 1 DECEMBER, 1930

TELETYPE

PRINTING TELEGRAPH SYSTEMS

PARTS

TAPE TRANSMITTER

AND

AUTO CONTROL RELAY UNIT




TELETYPE


PRINTING TELEGRAPH SYSTEMS


PARTS
TAPE TRANSMITTER
AND


AUTO CONTROL RELAY UNIT




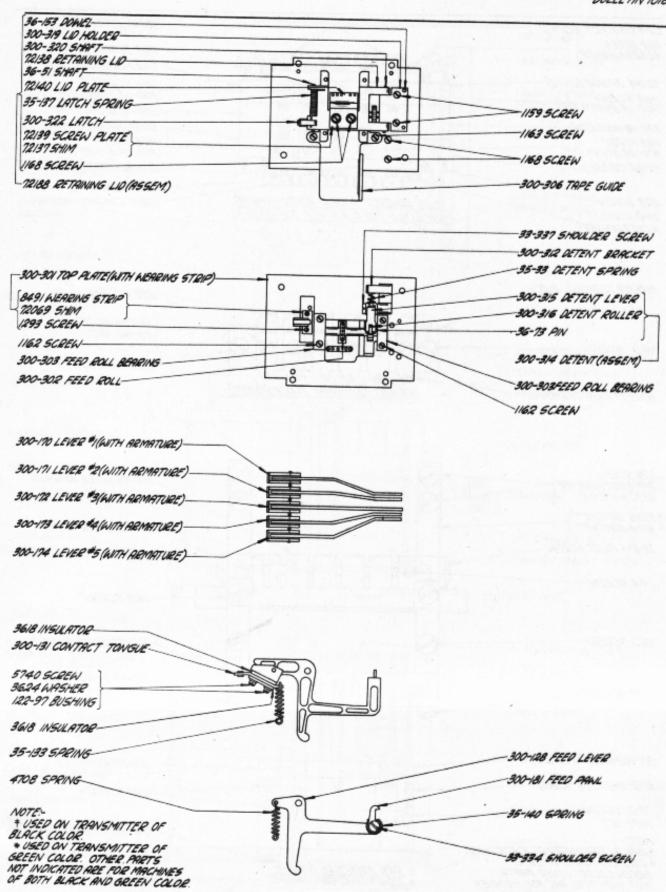


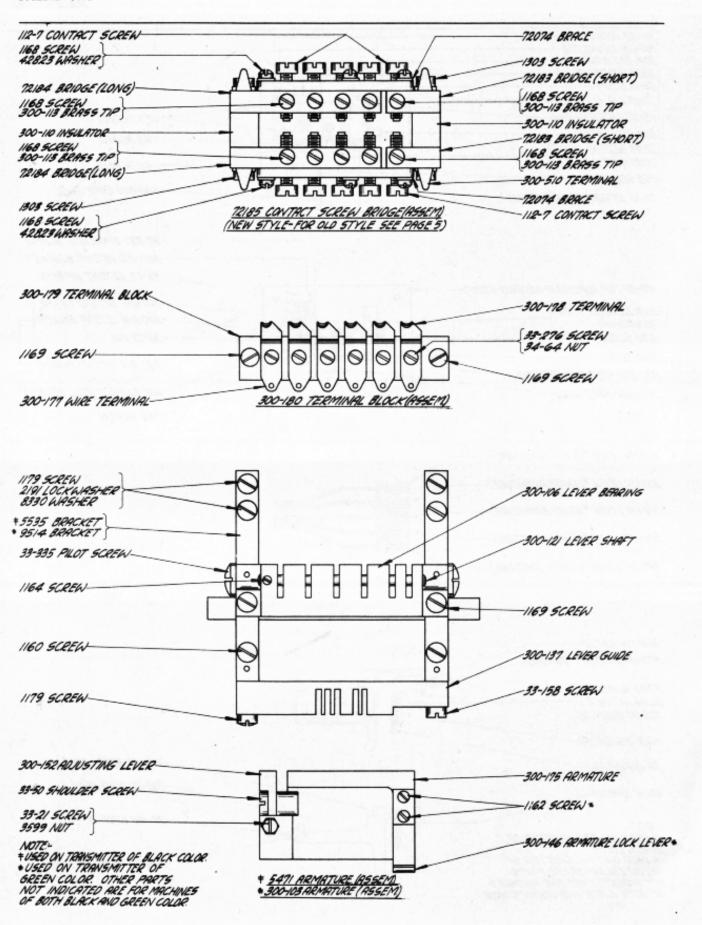


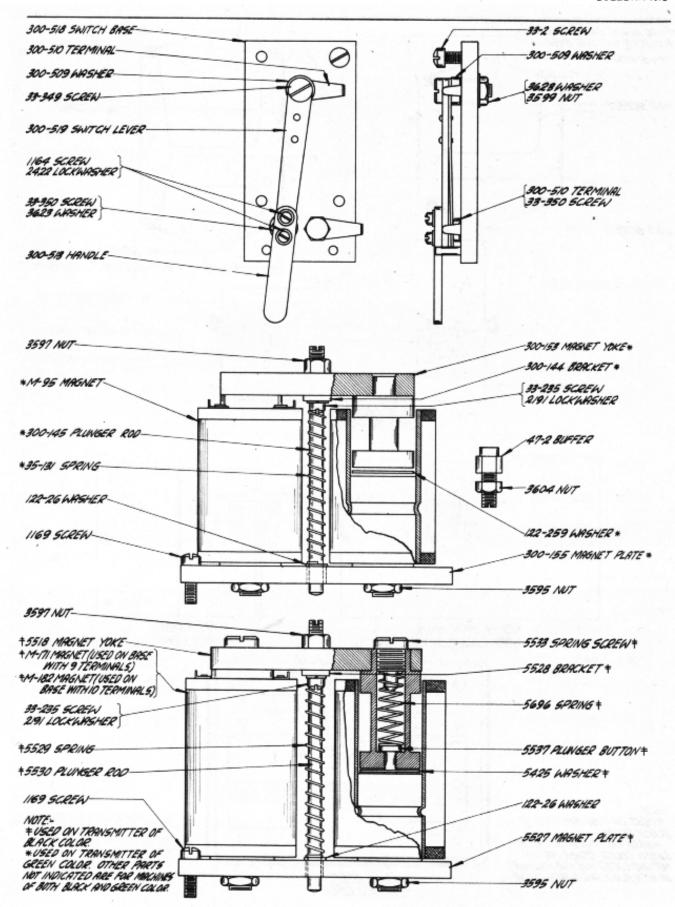

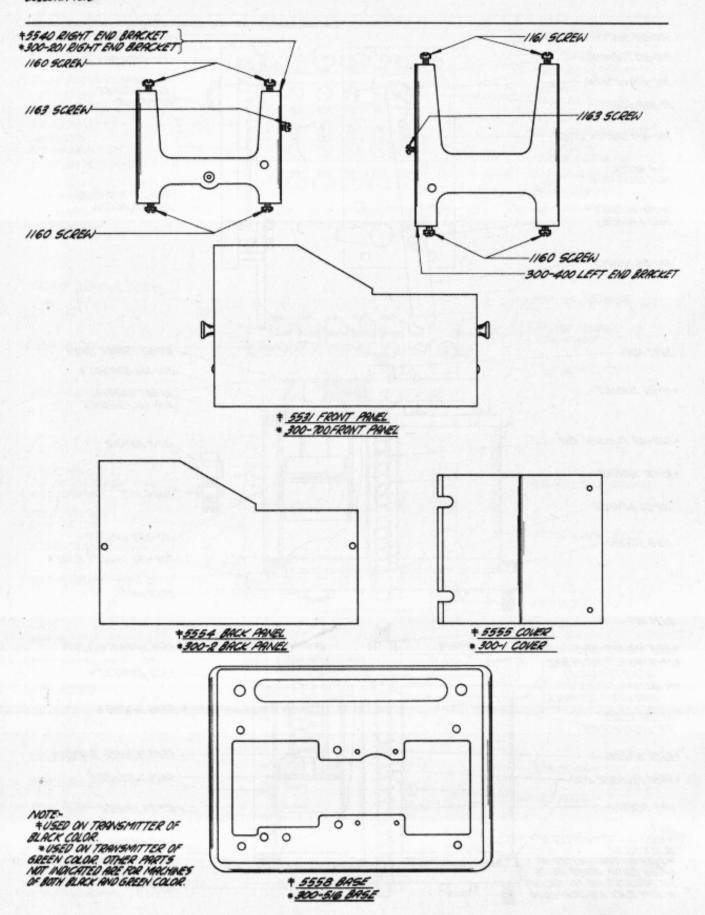

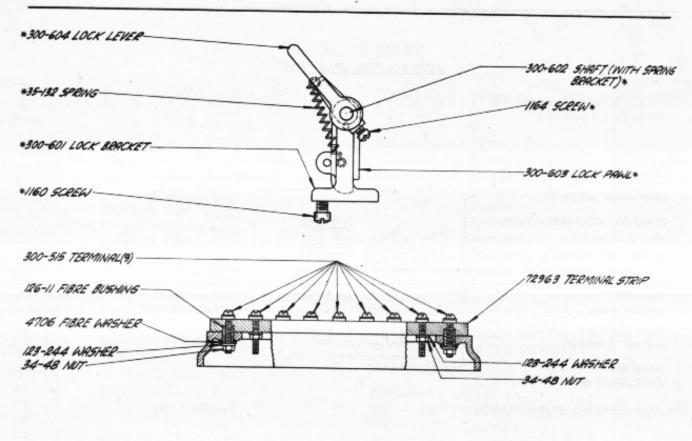

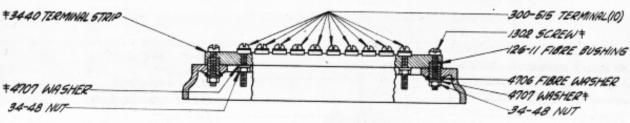


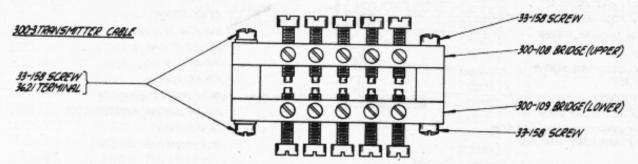


(FOR NEW STYLE AND PARTS NOT SHOWN SEE PAGE 2)

NOTE-\$USED ON TRANSMITTER OF BLACK COLOR. \$ USED ON TRANSMITTER OF GREEN COLOR OTHER PARTS NOT INDICATED ARE FOR MACHINES OF BOTH BLACK AND GREEN COLOR.

AUTO CONTROL RELAY UNIT

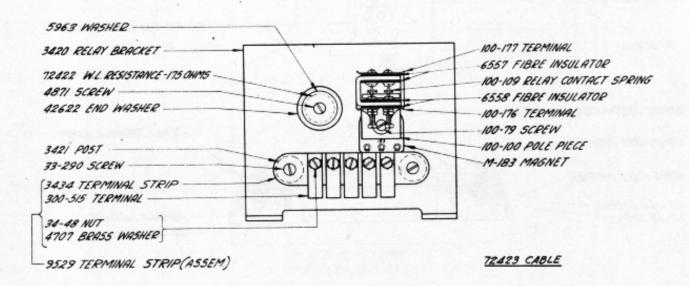

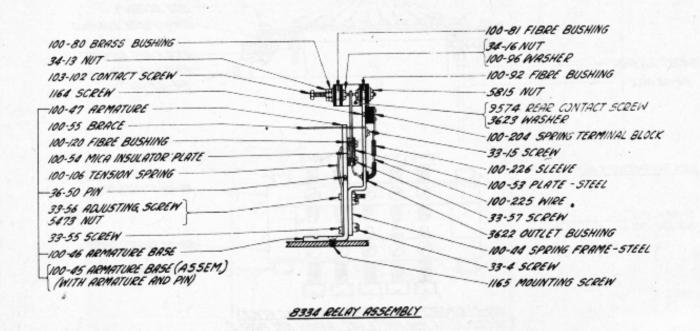

NUMERICAL INDEX

33-2 33-4 33-15	6-32 x 3/8 Screw, 3 6-32 x 1/4 Screw, 6 2-56 x 1/8 Screw, 6	100-177 100-204	
33-21	4-40 x 1/2 Screw, 2	100-225	Wire, 6
33-50	4-40 Shoulder Screw, 2	100-226	Sleeve, 6
33-55	3-56 x 1/8 Screw, 6	103-102	Contact Screw, 6
33-56	Adjusting Screw, 6	112-7	Contact Screw, 2
33-57	2-56 x 9/32 Screw, 6	122-26	Washer, 3
33-158	6-40 x 1/2 Screw, 2,5	122-97	Bushing, 1
33-235	6-32 x 5/16 Screw, 3	122-259	Wachen 7
33-276	3-48 x 5/16 Screw, 2	123-244	Washer, 3
33-290	8-32 x 1½ Screw, 6	126-11	Washer, 5
33-334	4-40 Shoulder Screw, 1	300-1	Fibre Bushing, 5
33-335	Pilot Screw, 2	300-2	Cover, 4
33-337	4-40 Shoulder Screw, 1		Back Panel, 4
33-349	4-40 Shoulder Screw, 3	300-3	Transmitter Cable, 5
33-350	4-40 x 3/16 Screw, 3	300-103	Armature (Assem.), 2
34-13	3-56 Hex. Nut, 6	300-106	Lever Bearing, 2
34-16	5/32-60 Hex. Nut, 6	300-107	Contact Screw Bridge
34-48	6-32 Her Mut 5 6	700 700	(Assem.) (Old Style), 5
34-64	6-32 Hex. Nut, 5,6	300-108	Bridge (Upper), 5
35-33	3-48 Sq. Nut, 2	300-109	Bridge (Lower), 5
35-131	Detent Spring, 1	300-110	Insulator, 2
35-132	Spring, 3	300-113	Brass Tip, 2
35-133	Spring, 5	300-121	Lever Shaft, 2
35-137	Spring, 1	300-128	Feed Lever, 1
35-140	Latch Spring, 1	300-131	Contact Tongue, 1
36-50	Spring, 1	300-137	Lever Guide, 2
36-51	Pin, 6	300-144	Bracket, 3
36-73	Shaft, 1	300-145	Plunger Rod, 3
	Pin, 1	300-146	Armature Lock Lever. 2
36-153	Dowel, 1	300-152	Adjusting Lever, 2
47-2	Buffer, 3	300-153	Magnet Yoke, 3
100-44	Spring Frame - Steel, 6	300-155	Magnet Plate, 3
100-45	Armature Base (Assem.)	300-170	Lever #1 (With Arma-
	(With Armature and Pin),		ture), 1
100 40	6	300-171	Lever #2 (With Arma-
100-46	Armature Base, 6		ture), 1
100-47	Armature, 6	300-172	Lever #3 (With Arma-
100-53	Plate - Steel, 6	THE RESERVE	ture), 1
100-54	Mica Insulator Plate, 6	300-173	Lever #4 (With Arma-
100-55	Brace, 6		ture), 1
100-79	8-40 x 2-19/32 Screw, 6	300-174	Lever #5 (With Arma-
100-80	Brass Bushing, 6		ture), 1
100-81	Fibre Bushing, 6	300-175	Armature, 2
100-92	Fibre Bushing, 6	300-177	Wire Terminal, 2
100-96	Washer, 6	300-178	Terminal, 2
100-100	Pole Piece, 6	300-179	Terminal Block, 2
100-106	Tension Spring, 6	300-180	Terminal Block (Assem.)
100-109	Relay Contact Spring, 6		2 . ABSem.)
100-120	Fibre Bushing, 6	300-181	Feed Pawl, 1
100-176	Terminal, 6	300-201	
	St. of telephological design and the second	200-201	Right End Bracket, 4

NUMERICAL INDEX

300-301 Top Plate (With Wear- 3597 5/32-40 Hex. Nu	t. 3
ing Strip), 1 3599 4-40 Hex. Nut,	7,7
700 700 700 700 700 700 700 700 700 700	,,,,
300-302 Feed Roll, 1 3604 5/32-40 Hex. Nu	τ, ο
300-303 Feed Roll Bearing, 1 3618 Insulator, 1	
300-306 Tape Guide, 1 3621 Terminal, 5	
300-312 Detent Bracket, 1 3622 Outlet Bushing,	6
300-315 Detent Lever, 1 3624 Washer, 1	
300-316 Detent Roller, 1 4706 Fibre Washer, 5	
300-319 Lid Holder, 1 4707 Washer, 5,6	
300-320 Shaft, 1 4708 Spring, 1	
300-322 Latch, 1 4871 3/16-24 x 4 Scr	aw 6
	, o
300-400 Left End Bracket, 4 5425 Washer, 3	` -
300-509 Washer, 3 5471 Armature (Assem	
300-510 Terminal, 2,3 5473 3-56 Hex. Nut,	3
300-513 Handle, 3 5518 Magnet Yoke, 3	
300-515 Terminal, 5,6 5527 Magnet Plate, 3	
, ,	
300-518 Switch Base, 3 5529 Spring, 3	
300-519 Switch Lever, 3 5530 Plunger Rod, 3	
300-601 Lock Bracket, 5 5531 Front Panel, 4	
300-602 Shaft (With Spring 5533 Spring Screw, 3	
Bracket), 5 5535 Bracket, 2	
	7
	3
300-604 Lock Lever, 5 5540 Right End Brack	et, 4
300-700 Front Panel, 4 5554 Back Panel, 4	
M-95 Magnet, 3 5555 Cover, 4	
M-171 Magnet, 3 5558 Base, 4	
M-182 Magnet, 3 5696 Spring, 3	
	- 1
	₩, ⊥
1159 4-40 x 3/8 Screw, 1 5815 4-48 Hex. Nut,	5
1160 6-40 x 5/16 Screw, 2,4,5 5963 Washer, 6	
1161 6-40 x t Screw, 4 6557 Fibre Insulator	, 6
1162 4-40 x 4 Screw, 1,2 6558 Fibre Insulator	
1163 4-40 x 3/16 Screw, 1,4 8330 Washer, 2	,
1164 2-56 x 3/16 Screw, 2, 8334 Relay (Assem.),	6
3,5,6 8491 Wearing Strip,	L
1165 6-32 x 4 Screw, 6 9514 Bracket, 2	
1168 4-40 x 5/16 Screw, 1,2 9529 Terminal Strip	Assem.),6
1169 6-40 x 7/16 Screw, 2,3 9574 Upper Contact Sc	crew, 6
1179 6-40 x 5/8 Screw, 2 42622 End Washer, 6	
1293 4-40 x .120 Screw, 1 42823 Washer, 2	
1302 6-32 x 4 Screw, 5 72069 Shim, 1	
2191 Lockwasher, 2,3 72137 Shim, 1	
2422 Lockwasher, 3 72138 Retaining Lid,	L
3420 Relay Bracket, 6 72139 Screw Plate, 1	
3421 Post, 6 72140 Lid Plate, 1	
3434 Terminal Strip, 6 72183 Bridge (Short),	2
70705	nt does
4 co nox. hav, b	TURE
(Assem), 2	

NUMERICAL INDEX

72188	Retaining Lid (Assem.), 1
72422	W.L. Resistance (175
	Ohms), 6
72423	Cable, 6
72963	Terminal Strip, 5